


ASSEMBLY INSTRUCTIONS ER Series Receptacles for Hazardous Locations

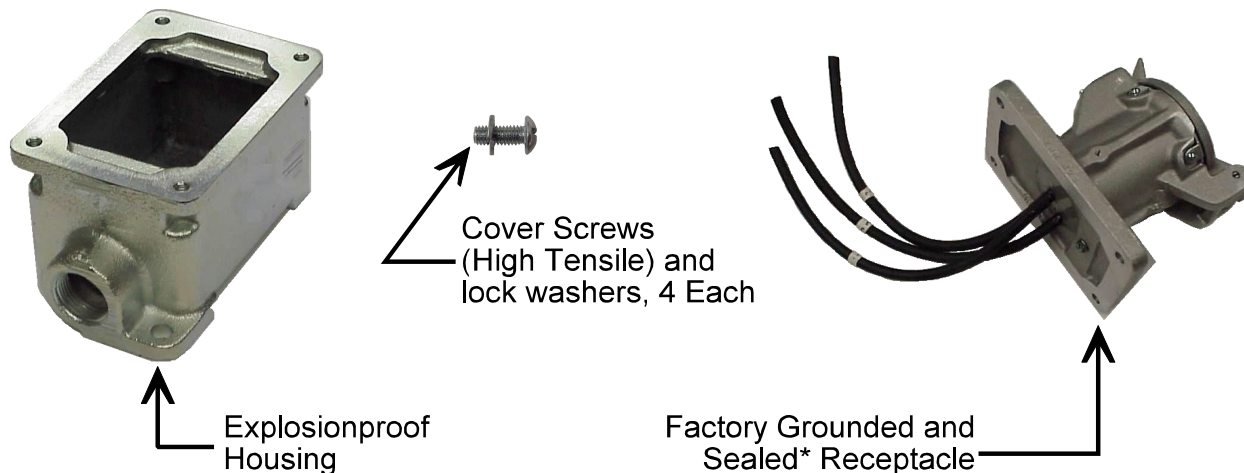

PROCEDURE

- A. Prepare service leads and connect to line side leads. The green screw installed in receptacle base is provided for ground lead attachment.
- B. Remount receptacle to the explosionproof housing.
- C. Secure with screws using lock washers.

IMPORTANT: The surfaces of the metal-to-metal joint between the receptacle and housing must be protected from damage throughout installation. ALL cover screws and lock washers must be re-installed and tightened. Screws are made of high tensile steel - Do Not Substitute. When assembled, the metal-to-metal joint perimeter must not allow a .0015 inch feeler gage to penetrate greater than 1/8 inch.

*In the event of accidental breaking of sealing compound, receptacle must be returned to factory for resealing in accordance with Underwriter's Laboratories requirements. On job sealing does not comply with U/L.